

HIFI-FMT
PC USB Audio RDS HiFi FM Transmitter

Welcome to use our HiFi- FMT, You only need few steps to operate it, Then you can setup your own radio station easily. Please choose an empty channel of your radio , It will increase the transmit distance , and that the sound will be very well. FM Transmitter connect with the PC by USB line, Drivers will install automatically. FM Transmitter factory set: 100.0MHz, RDS: VAS HiFi- FMT. You can modify the related information, Through HiFi- FMT configure software. Such as:
Sound: Preset, Threshold, Enable limiter and so on
Transmitter: Frequency, power, FM Pre-Emphasis, Stereo/Mono
RDS : PS messages, Radio Text
About the configure software help, Please put the mouse on the item which you want to know, It will display the help message automatically.
Configure software download: <http://www.vastint.com>

Transmit Frequency:**76.00-108.00MHz** (It suitable worldwide)
Power output:**0-200mW** (continuously variable,Meets all FCC requirements for Part 15 operation)
Output connector:SMA-F
ANT Output Impedance:50 Ohms
Audio Compression:Yes
Audio Limitation:Yes
Audio Signal Measurements:Yes
Pre-Emphasis:0/50/75 uS
Transmission Signal:Stereo or Mono
RDS:Yes(Normally display the name of Radio)
RDS RadioText:Yes(Normally display the Radio profile,MAX 62 Characters)
Dynamic RDS Information(Title/Artist tags):PC Mode:Yes
Dynamic RDS Information(Title/Artist tags):Stand-alone Mode: No
RadioText Plus (RT+) parsers:Yes
HTTP Web-Interface:Yes(Software -> Remote HTTP Access)
RDS Time:Yes
Drivers Installation Needed:No
External power needed:PC Mode: No
External power needed:Stand-alone Mode: Yes(DC5V)
Size:62*50*12mm (L*W*H)